




WINDOW MUNTIN ID GUIDE

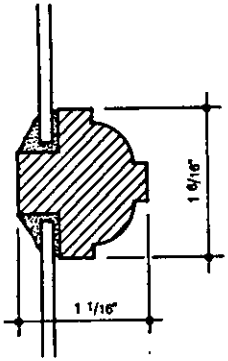


1740s WOOD MUNTIN

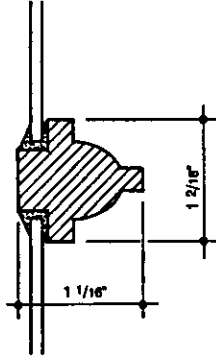


1760s WOOD MUNTIN

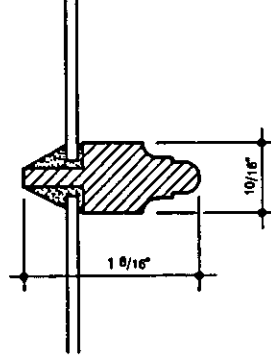


1823s WOOD MUNTIN

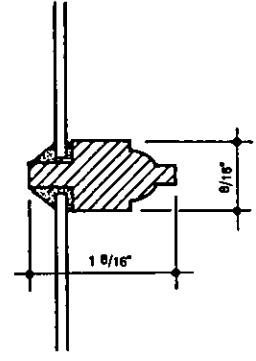


1835s WOOD MUNTIN

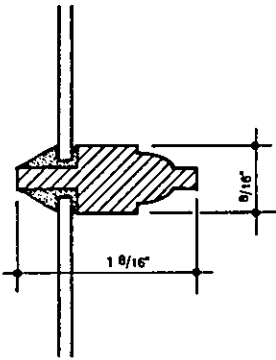


1845 WOOD MUNTIN

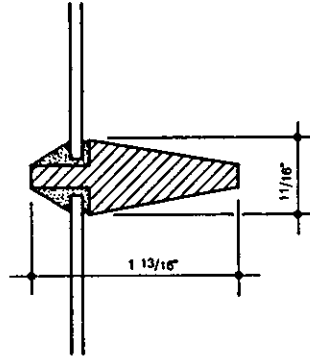


1850s WOOD MUNTIN

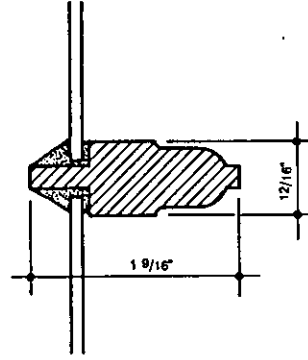


1870s WOOD MUNTIN

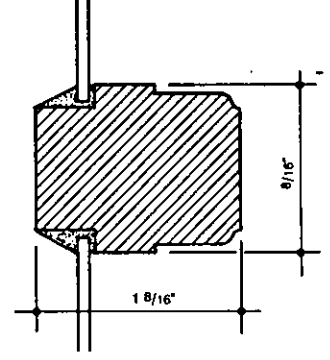


1879 WOOD MUNTIN

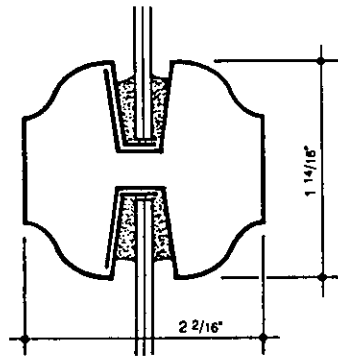


1905 HOLLOW-CORE METAL MUNTIN

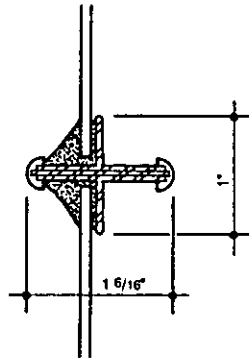

1911 STEEL MUNTIN

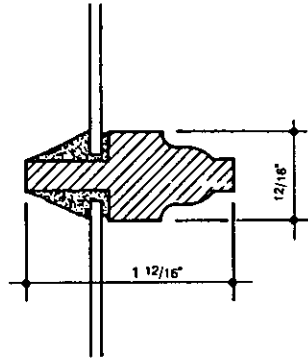

1915 WOOD MUNTIN

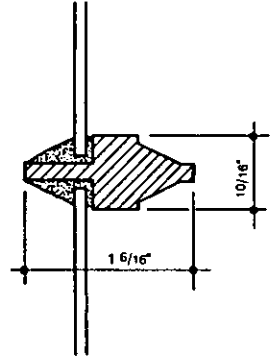


1932 WOOD MUNTIN




1905 HOLLOW-CORE METAL



1911 INDUSTRIAL STEEL

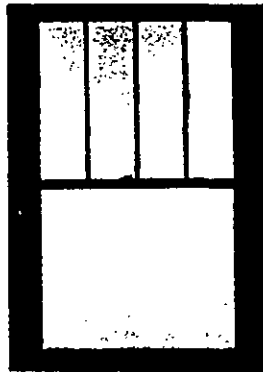

1915 ARTS AND CRAFTS RESIDENTIAL

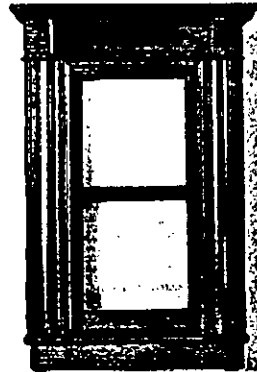

1920s RESIDENTIAL WITH ROLLER SCREEN



1930s RESIDENTIAL CASEMENT